



[FAQs](#) > [Classic Series - DAB+ and Music Systems](#) > [Classic C-D4](#) > [How to change the source played on my Classic C-D4?](#)

How to change the source played on my Classic C-D4?

Customer Support - 2025-10-15 - [Classic C-D4](#)

You would like to change the source that is playing on your Classic C-D4?

The available sources on the Classic C-D4 are **DAB+**, **FM**, **Bluetooth**, **USB**, **CD**, **Aux In**.

1. To choose a source for playback, simply tap on the "**Source**" button of your Classic C-D4 to open the selection window.
2. Pressing the "**Source**" button repeatedly or turning the "**Select**" dial will cycle through the available sources.
3. To confirm your selection, press the "**Select**" dial.

The source will also change to the highlighted automatically after 2 seconds, if no other button is pressed.

Your remote control also offers **direct access buttons** for **DAB+**, **FM**, **CD**, **Bluetooth**, and **USB**.