

FAQs > Woodland Series - Outdoor Speakers/Radios > How to save and recall presets on a Woodland?

How to save and recall presets on a Woodland? Customer Support - 2025-01-27 - Woodland

You would like to save a preset or recall a preset on your Woodland?

The Woodland allows you to save **3** presets, both, for **DAB** and **FM**.

- 1. You can store a radio station currently listened to, to one of the quick access preset buttons.
- 2. Pressing the quick access preset button until "**Saved**" appears, will save the station currently listened to.
- 3. By short pressing the preset button, you can quickly **recall** it.