



[FAQs](#) > [Woodland Series - Outdoor Speakers/Radios](#) > [Woodland Glow](#) > [How to switch a Woodland Glow on and off?](#)

## How to switch a Woodland Glow on and off?

Customer Support - 2025-07-04 - [Woodland Glow](#)

## How to switch a Woodland Glow on and off?

1. Long pressing the "**Power**" on/off button will boot your Woodland Glow. This will be confirmed by a sound from your speaker.
2. The battery charge status is displayed by the 4 white LEDs on the top of the unit.

If you switch on your Woodland Glow for the first time, the speaker will automatically enter **Bluetooth pairing** mode. This is also indicated by the **flashing blue LED**.

1. To switch the Woodland Glow off, keep the "**Power**" button pressed.

The power status LEDs will light up, indicating the charge status of the battery and will then and then go out. Your Woodland Glow is now **switched off**.