



[FAQs](#) > [Woodland Series - Outdoor Speakers/Radios](#) > [Woodland - Quick Help](#)

## Woodland - Quick Help

INSIDE / AQIPA - 2025-07-04 - [Woodland Series - Outdoor Speakers/Radios](#)

# Our most important tips on how to use your Woodland

1. **Before operating the product**, always consult the [Woodland Quick Start Guide](#). You can find the QSG for the Woodland in our [Download Center](#).

1. **Before we start, we state the obvious.**

Please make sure the antenna is fully extended, and all plastic covers are removed. Using a USB power supply (not included), connect your device to a power source to fully charge the installed battery.

1. **Switching Woodland on/off**

Pressing the Standby on/off button will boot your Woodland.

When you use Woodland for the first time, the unit will automatically enter a DAB scan. All available stations are found and saved to the Station list without you having to do anything.

Click here to [read more](#).

1. [Scanning and selecting DAB+](#) or [FM Stations](#)

We have two separate articles on these topics that you can select by clicking on the highlighted words.

1. **Saving or recalling a preset**

The Woodland allows you to save up to 6 presets.

More details can be found [here](#).

1. **Pairing a Bluetooth device**

Long press the "Bluetooth" button and the Woodland will enter pairing mode.

More detailed instructions on how to find your Woodland on the device you want to pair and more on pairing with BT can be found [here](#).

#### 1. **Battery Runtime**

To find out more on the battery runtime, read [this article](#).