



FAQs > Classic Series - DAB+ and Music Systems > Classic C-D6 > How to adjust the display brightness on a Classic C-D6?

How to adjust the display brightness on a Classic C-D6?

Customer Support - 2024-11-11 - Classic C-D6

Would you like to adjust the brightness of the display on your Classic C-D6?

1. To customize the display brightness, press the "**Home**" button to access the main menu.
2. Use the "**Select**" dial to scroll to "**System**" and press the dial to select.
3. Scroll through the settings options until you find "**Backlight**" and press the dial to enter.

You'll see three options: "**Timeout**", "**On Level**" and "**Dim Level**".

1. Select the "**Timeout**" to define the duration until the display brightness changes from "**On Level**" to "**Dim Level**".
2. Select "**On Level**" to adjust the brightness when the radio is on, and "**Dim Level**" to adjust the brightness of the display when the radio enters dim mode. This means you can set the display to be brighter when you're actively using it. The "**Dim Level**" will also affect the display when the radio is in standby.

And there you go! You can now easily adjust the display brightness of your Classic C-D6 radio to match your environment and preferences.