



FAQs > Classic Series - DAB+ and Music Systems > Classic H4 > How to change the source on a Classic H4?

How to change the source on a Classic H4?

Customer Support - 2024-11-07 - Classic H4

You would like to change the source that is playing on your Classic H4?

The available sources are **DAB**, **FM**, **Bluetooth**, **Aux In** and **USB**.

1. To choose a source for playback, simply tap on the "**Source**" button of your Classic H4 to open the selection window.
2. Pressing the "**Source**" button repeatedly, or turning the "**Select**" dial will cycle through the available sources.
3. To confirm your selection, press the "**Select**" dial.