



[FAQs](#) > [Classic Series - DAB+ and Music Systems](#) > [Classic Aura](#) > [Come caricare il mio altoparlante Classic Aura e controllare lo stato della batteria?](#)

## **Come caricare il mio altoparlante Classic Aura e controllare lo stato della batteria?**

Customer Support - 2026-05-05 - [Classic Aura](#)

### **Vuoi caricare il tuo Classic Aura e controllare lo stato della batteria?**

1. Classic Aura richiede un caricabatterie USB-C da 5W a 30W.

Per ottenere una velocità di ricarica ottimale e per avere il massimo volume durante la ricarica, sono necessari 30W.

1. Collega il diffusore al caricatore USB-C.






L'icona Eco (Batteria) lampeggia durante la ricarica.

1. Una volta caricato al 100%, l'icona Eco (Batteria) smetterà di lampeggiare.




 

Puoi verificare lo stato di carica anche durante l'ascolto premendo il pulsante Eco per 2 secondi.

I 4 LED sopra la manopola del volume illumineranno lo stato attuale della batteria.



Battery level		LED Behavior				Illustration
From	To	LED1	LED2	LED3	LED4	
75%	100%	high	high	high	blink	
45%	75%	high	high	blink	off	
25%	45%	high	blink	off	off	
5%	25%	high	off	off	off	
0%	5%	blink	off	off	off	

High
  Low
  Pulse
  Blink
  Off

Battery level		LED Behavior				Illustration
From	To	LED1	LED2	LED3	LED4	
95%	100%	on	on	on	on	
75%	95%	on	on	on	pulse	
45%	75%	on	on	pulse	off	
25%	45%	on	pulse	off	off	
0%	25%	pulse	off	off	off	

High
  Low
  Pulse
  Blink
  Off