



FAQs > Help by Connection Type (BT, Internet,...) > Smarte Lautsprecher > DiscovR > Privacy > How can I deactivate the microphones on my DiscovR speaker?

How can I deactivate the microphones on my DiscovR speaker?

Laura - 2021-10-19 - Privacy

The microphones on DiscovR can be disabled in one of two ways:

- (i) Press the Mic mute icon on the control panel of your DiscovR speaker. Once the icon illuminates red, this indicates the microphones have been disabled.
- (ii) Press down on the top panel of the speaker until it closes to activate Mic Drop mode. This will disconnect and turn off the microphones for enhanced privacy.