



FAQs > Classic Series - DAB+ and Music Systems > Classic H4 > How to change FM Stations Classic H4?

How to change FM Stations Classic H4?

Customer Support - 2024-10-15 - Classic H4

You would like to save and change your FM Stations on your Classic H4?

1. When you switch to FM mode for the first time, press the "Home" button.
2. Select "**Station search**" and confirm with "**Yes**"
3. The radio will now scan all available FM frequencies and store them to the presets (max. 40). This process may take a few moments as it captures each station. You don't have to do anything.

1. To change the FM station later, short press the "**Preset**" button on the radio while being in FM mode. This will open the "**Recall from Presets**" list.
2. Turn the "**Select**" dial to choose a station.
3. Once you've found the station you wish to listen to, press the dial to recall the station.

If you're looking for a specific FM station or want to fine-tune your listening experience, turn the "**Select**" dial to manually seek through the FM frequencies.

To perform a new scan for all FM stations, simply repeat the procedure above. Your radio will then delete all stored FM stations and automatically begin scanning for all available stations.