



[FAQs](#) > [Classic Series - DAB+ and Music Systems](#) > [Classic Active](#) > [Hoe sla je voorkeurszenders op of roep je ze op bij een Classic Active?](#)

Hoe sla je voorkeurszenders op of roep je ze op bij een Classic Active?

Customer Support - 2026-03-23 - [Classic Active](#)

You would like to save a preset or recall a preset on your Classic Active?

The Classic Active allows you to save up to **40** presets for **DAB+** and **FM** radio.

1. To store a station to the preset list, long press the "**Favourites**" button until "**Store**" is displayed.
2. Turn the "**Select**" dial to choose the position within the list (1-40) and press the "**Select**" dial to confirm. The station listened to is now saved on the chosen preset.
3. This can also be done using your remote control. It also offers 6 Quick Access buttons, allowing you to directly save and recall presets 1-6.
4. To recall a preset, short press the "**Favourites**" button (or "**Presets**" on your remote control), select the station you would like to listen to, and confirm by pressing the "**Select**" dial (or "**Play/Pause**" button on the remote).

Buttons on the remote

- Favourites = Presets
- Store = Play/Pause >||
- Select = |< / >|
- Confirm = Play/Pause >||