



[Baza Wiedzy](#) > [Help by Connection Type \(BT, Internet,...\)](#) > [Smarte Lautsprecher](#) > [DiscovR](#) > [Privacy](#) > [How can I deactivate the microphones on my DiscovR speaker?](#)

## How can I deactivate the microphones on my DiscovR speaker?

Laura - 2021-10-19 - [Privacy](#)

The microphones on DiscovR can be disabled in one of two ways:

- (i) Press the Mic mute icon on the control panel of your DiscovR speaker. Once the icon illuminates red, this indicates the microphones have been disabled.
- (ii) Press down on the top panel of the speaker until it closes to activate Mic Drop mode. This will disconnect and turn off the microphones for enhanced privacy.