



Baza Wiedzy > Classic Series - DAB+ and Music Systems > Classic H4 > How to change FM Stations on a Classic H4?

How to change FM Stations on a Classic H4?

Customer Support - 2024-11-07 - Classic H4

You would like to save and change your FM Stations on your Classic H4?

1. When you switch to FM mode for the first time, press the "**Home**" button.
2. Select "**Station search**" and confirm with "**Yes**"
3. The radio will now scan all available FM frequencies and store them to the presets (max. 40). This process may take a few moments as it captures each station. You don't have to do anything.

1. To change the FM station later, short press the "**Preset**" button on the radio while being in FM mode. This will open the "**Recall from Presets**" list.
2. Turn the "**Select**" dial to choose a station.
3. Once you've found the station you wish to listen to, press the dial to recall the station.

If you're looking for a specific FM station or want to fine-tune your listening experience, turn the "**Select**" dial to manually seek through the FM frequencies.

To perform a new scan for all FM stations, simply repeat the procedure above. Your radio will then delete all stored FM stations and automatically begin scanning for all available stations.