



Baza Wiedzy > Classic Series - DAB+ and Music Systems > Classic Mini > How to change the source played on a Classic Mini?

How to change the source played on a Classic Mini?

Customer Support - 2024-10-18 - Classic Mini

You would like to change the source that is playing on your Classic Mini?

The available sources are **DAB+**, **FM** and **Bluetooth**.

1. To choose a source for playback, simply tap on the "**Source**" button of your Classic Mini to open the selection window.
2. Pressing the "**Source**" button repeatedly, or turning the "**Volume/Select**" dial will cycle through the available sources.
3. To confirm your selection, press the "**Select**" dial.

The source will also change to the highlighted automatically after 2 seconds, if no other button is pressed.