# Come caricare il mio altoparlante Classic Aura e controllare lo stato della batteria?

Customer Support - 2026-05-05 - Classic Aura

## Vuoi caricare il tuo Classic Aura e controllare lo stato della batteria?

1. Classic Aura richiede un caricabatterie USB-C da 5W a 30W.

Per ottenere una velocità di ricarica ottimale e per avere il massimo volume durante la ricarica, sono necessari 30W.

1. Collega il diffusore al caricatore USB-C.

L'icona Eco (Batteria) lampeggia durante la ricarica.

1. Una volta caricato al 100%, l'icona Eco (Batteria) smetterà di lampeggiare.

Puoi verificare lo stato di carica anche durante l'ascolto premendo il pulsante Eco per 2 secondi.

I 4 LED sopra la manopola del volume illumineranno lo stato attuale della batteria.



| Battery level | | LED Behavior | | | | Illustration |
|---|---|---|---|---|---|---|
| From | To | LED1 | LED2 | LED3 | LED4 | |
| 75% | 100% | high | high | high | blink |  |
| 45% | 75% | high | high | blink | off |  |
| 25% | 45% | high | blink | off | off |  |
| 5% | 25% | high | off | off | off |  |
| 0% | 5% | blink | off | off | off |  |

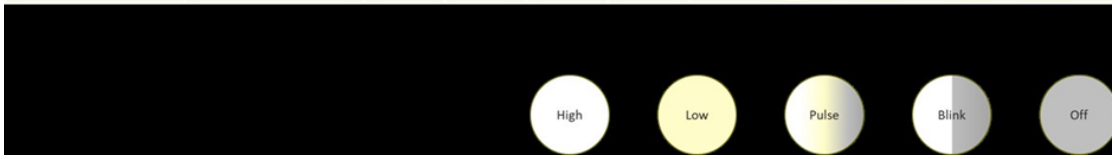


| Battery level | | LED Behavior | | | | Illustration |
|---|---|---|---|---|---|---|
| From | To | LED1 | LED2 | LED3 | LED4 | |
| 95% | 100% | on | on | on | on |  |
| 75% | 95% | on | on | on | pulse |  |
| 45% | 75% | on | on | pulse | off |  |
| 25% | 45% | on | pulse | off | off |  |
| 0% | 25% | pulse | off | off | off |  |

